


Outside Humidity and Temperature Sensor


Important: Retain these instructions

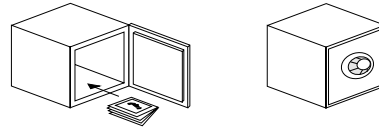

CONTENTS



1	Unpacking	1	3	Fault Finding	4
2	Installation	1	4	Maintenance	5
			5	Disposal	8

1 Unpacking



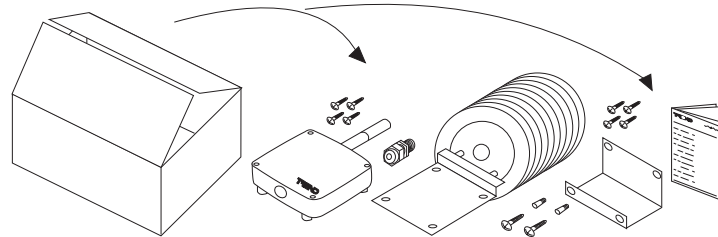


HT/O Installation
Instructions TG200992





2 Installation

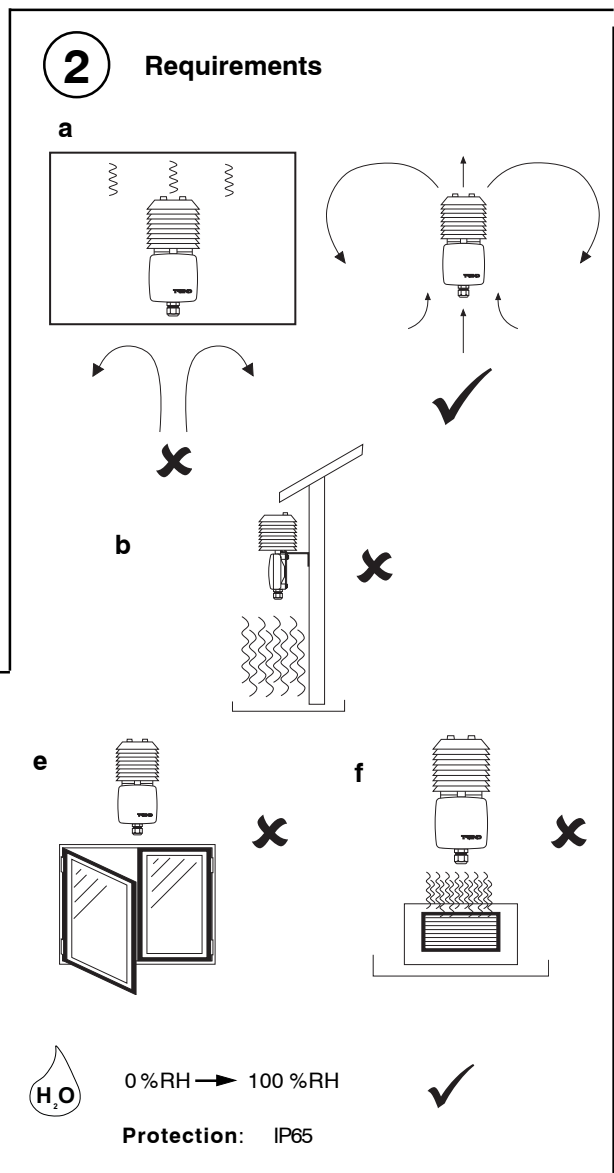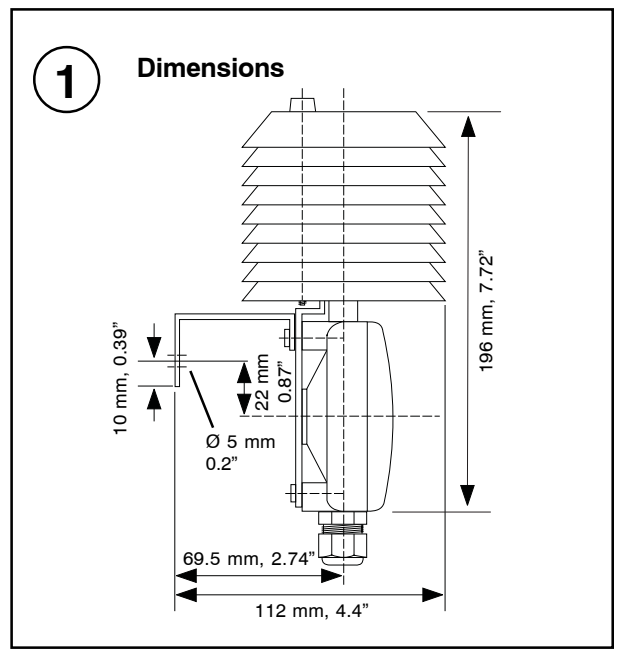

2 Installation (continued)

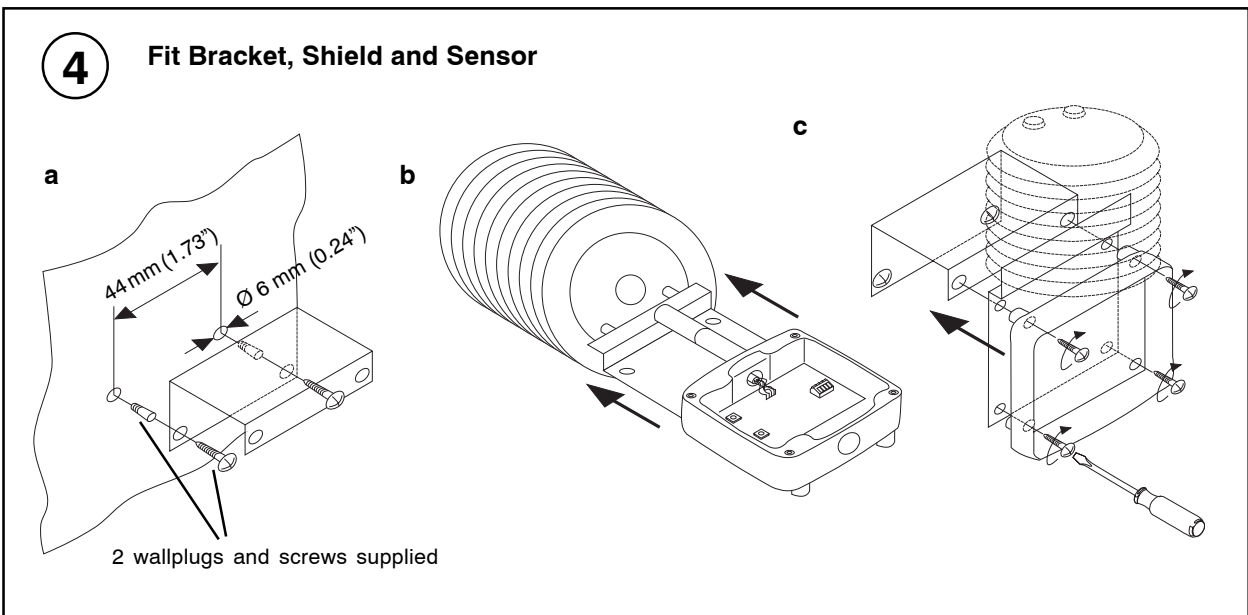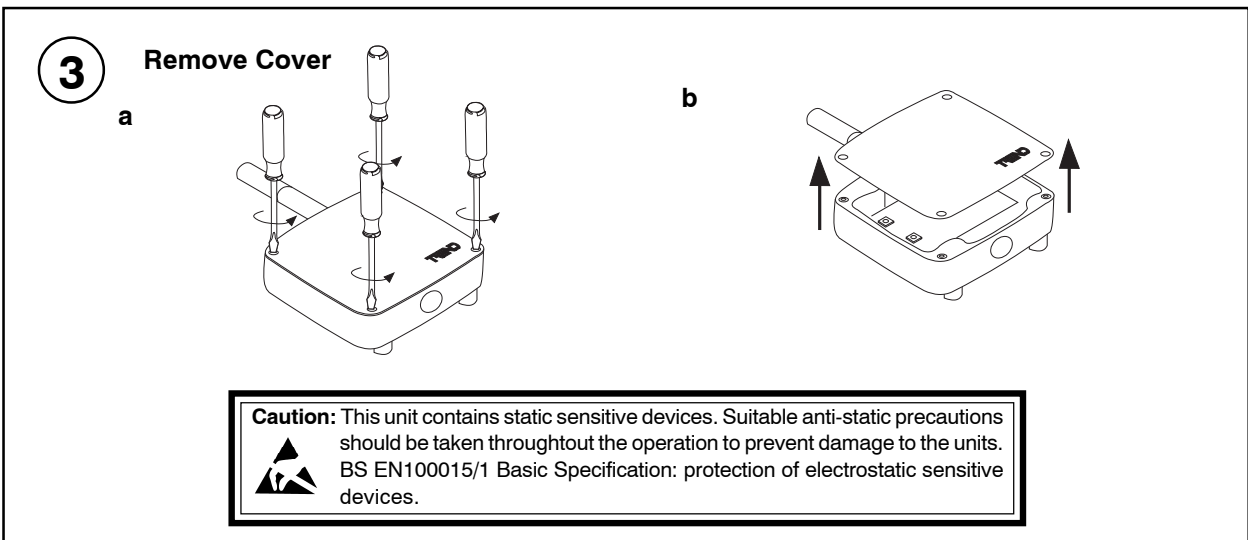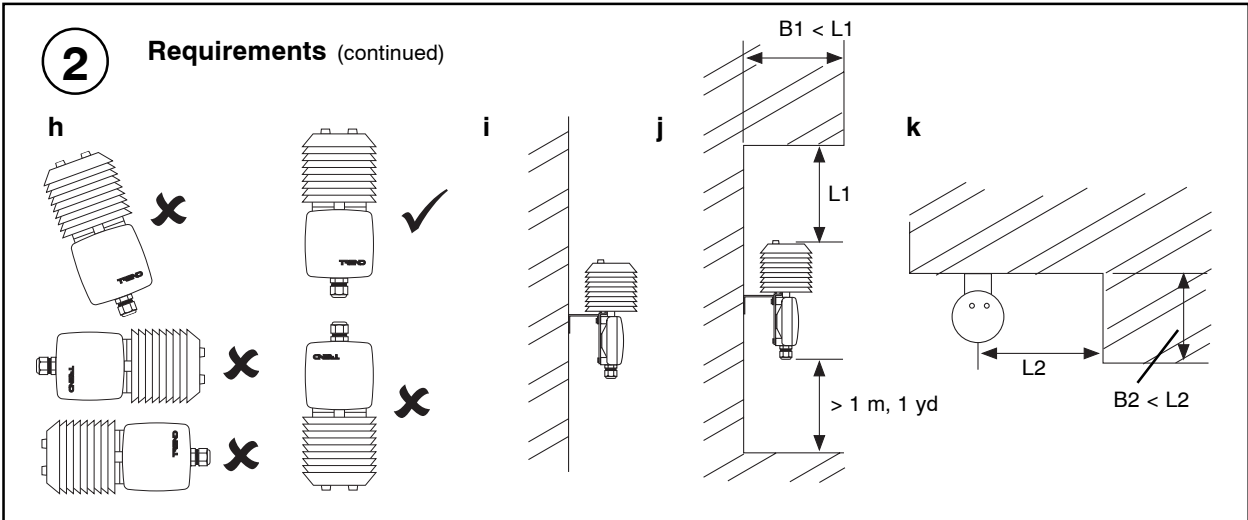

2 Installation (continued)

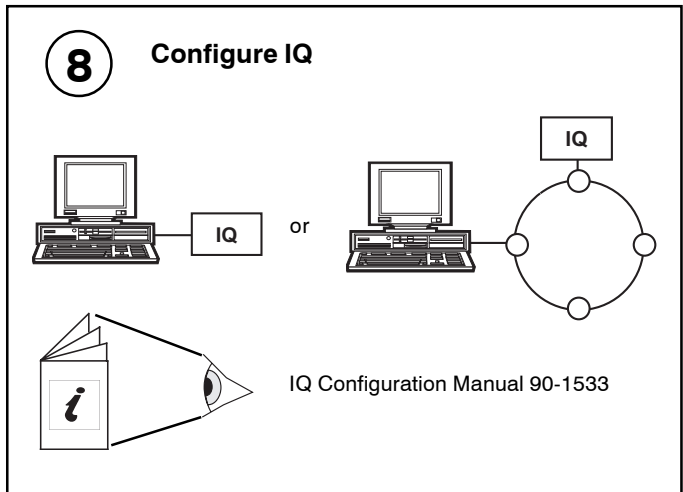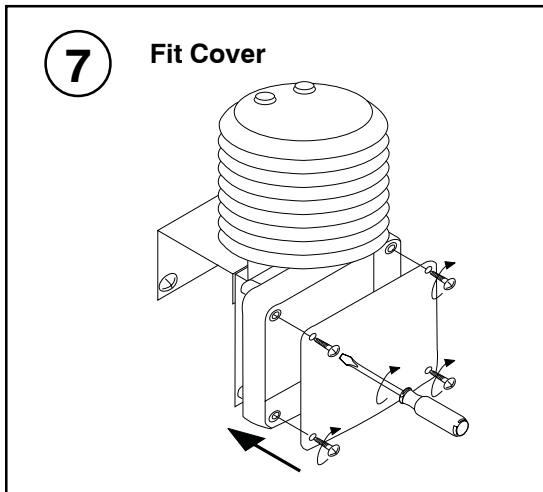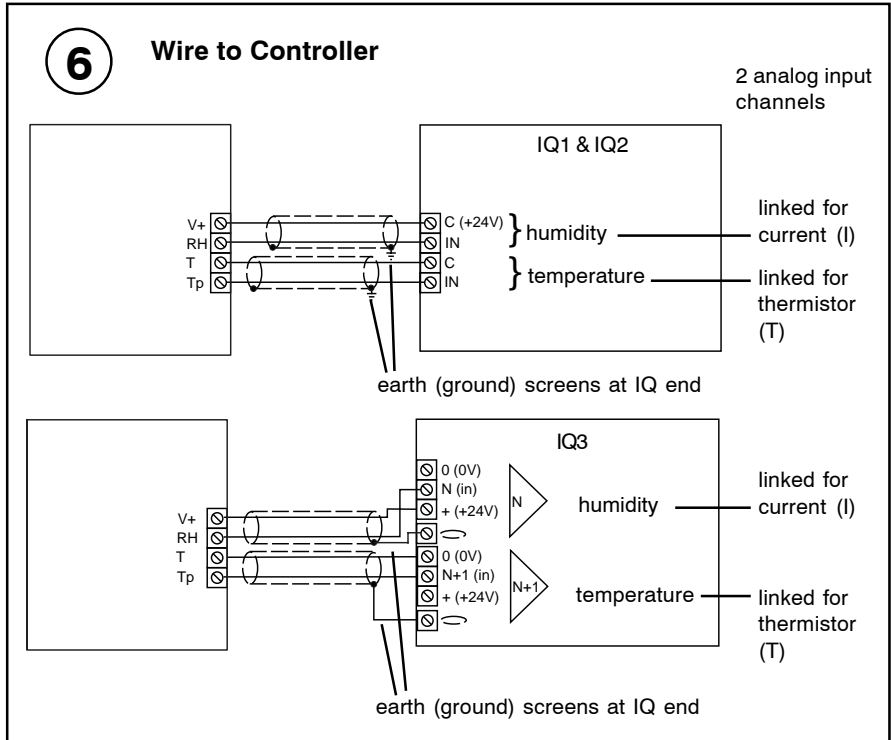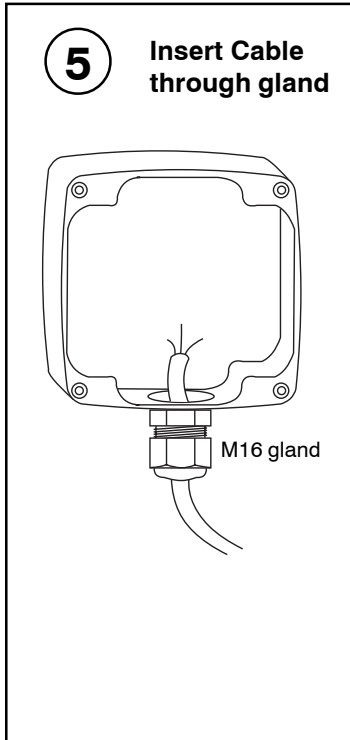

2 Installation (continued)

9 Set up IQ Sensor types

It is recommended to use SET (Software Tool) for the setting of the sensor type module. For all IQ2 series controllers with firmware version 2.1 or greater, or IQ3 series controllers, the following SET Unique Sensor References should be used:

- Humidity :**Humidity I**
- Temperature :**Thermistor HTOT (°C)**
Thermistor HTOT F (°F)

Alternatively enter scaling manually as defined in tables below.

For all other IQ contriollers see Sensor Scaling Reference Card TB100521A


Temperature (thermistor)
 (-30 to +50 °C, -22 to 122 °F)

Units:		°C	°F
Y	Input type	1 (therm V)	
E	Exponent	3	
U	Upper	55	131
L	Lower	-35	-31
P	Points	11	
x	lx	Ox	
1	2.641	50	122
2	3.470	40	104
3	4.460	30	86
4	6.663	10	50
5	7.668	0	32
6	8.102	-5	23
7	8.482	-10	14
8	8.807	-15	5
9	9.078	-20	-4
10	9.299	-25	-13
11	9.476	-30	-22

Humidity (current)
 (0 to 100 %RH)

Y	Input type	2 (curr mA)
E	Exponent	3
U	Upper	100
L	Lower	0
P	Points	2
x	lx	Ox
1	4	0
2	20	100

10 Test System

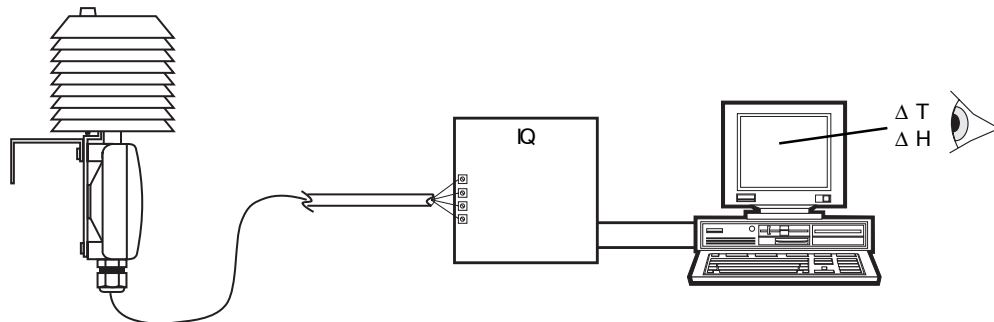

3 Fault Finding

Faults	Possible Causes	Remedies
Long response time	Filter polluted	Replace filter
Complete failure	No power supply	Check power supply and cable
Humidity reading too high	Condensation on sensor probe	Dry probe and replace filter if necessary


4 Maintenance

Over time, the sensing element may become covered in dust. The dust can be removed using compressed air. Under no circumstances should water or cleansing agents be used on the sensing elements.


It is recommended that the accuracy of the sensor is verified every 12 months. If the sensor falls outside the quoted accuracy, replace the filter and recalibrate as shown below:

1 Remove Cover


Caution: This unit contains static sensitive devices. Suitable anti-static precautions should be taken throughout the operation to prevent damage to the units.
 BS EN100015/1 Basic Specification: protection of electrostatic sensitive devices.

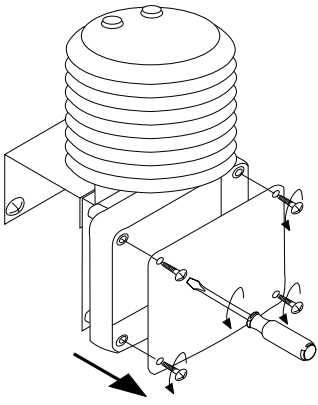


2 Detach Sensor

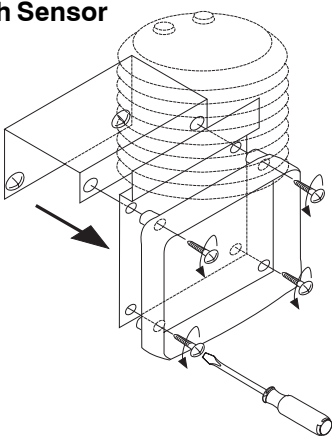


3 Remove from Radiation Shield

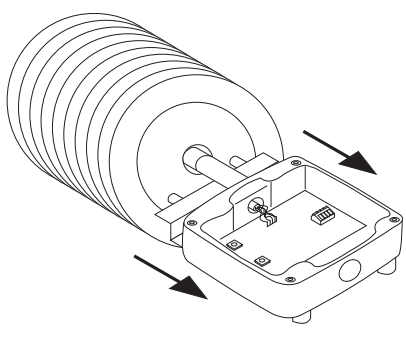


4 Replace filter

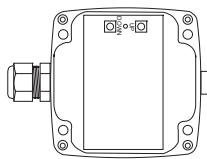


c ACC/HTO/FILTER




a unscrew

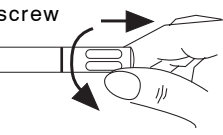

b See Section 5, Disposal

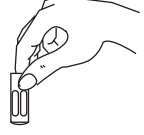

d

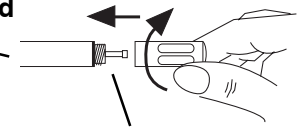


Caution: Do not touch humidity sensing element

5 Preparation

- Keep sensor and humidity chamber in same room for 4 hours before.
- Place probe in humidity chamber 30 mins before.
- Keep temperature constant during calibration.

6 Locate buttons

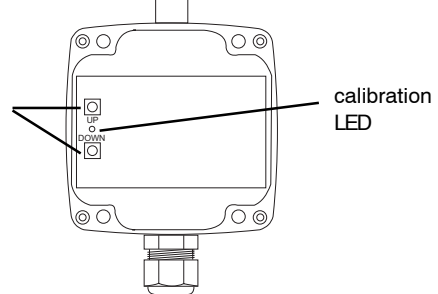

push buttons calibration LED

4 Maintenance (continued)

7 Two point calibration

For calibration over whole working range

- Start calibration at lower humidity point.
- Difference between the two points should be >30%RH

Low Humidity Calibration

- 1 Remove lid from the calibration chamber (ACC/CAL/HT) and clean chamber thoroughly.
- 2 Insert one of the cloths provided with the calibrating liquid. Pour calibrating liquid (ACC/CAL/HT/35%) onto the fabric. Refit lid and screw tightly.
- 3 Insert probe into sensor aperture of chamber and tighten collar to provide air tight seal around the probe. Wait 30 min.
- 4 Press Down pushbutton for 3 s to start. LED will illuminate.
- 5 Press Up or Down pushbutton to adjust measured value in 0.1% steps.
- 6 **Either:** Press Up pushbutton for 3 s to stop. Calibrated value is stored. LED is extinguished.
Or: Press Down pushbutton for 3 s to exit calibration without storing value. LED is extinguished.

High Humidity calibration

- 7 Remove lid from the calibration chamber (ACC/CAL/HT) and clean chamber thoroughly.
- 8 Insert one of the cloths provided with the calibrating liquid. Pour calibrating liquid (ACC/CAL/HT/80%) onto the fabric. Refit lid and screw tightly.
- 9 Insert probe into sensor aperture of chamber and tighten collar to provide air tight seal around the probe. Wait 30 min.
- 10 Press Up pushbutton for 3 s to start. LED will illuminate.
- 11 Press Up or Down pushbutton to adjust measured value in 0.1% steps
- 12 **Either:** Press Up pushbutton for 3 s to stop. Calibrated value is stored. LED is extinguished.
Or: Press Down pushbutton for 3 s to exit calibration without storing value. LED is extinguished.

8 One point calibration


For calibration over limited range about single point

- This calibration decreases accuracy over remainder of working range


Single Point Humidity Calibration

- 1 Remove lid from the calibration chamber (ACC/CAL/HT) and clean chamber thoroughly.
- 2 Insert one of the cloths provided with the calibrating liquid. Pour calibrating liquid (ACC/CAL/HT/35% or / 80%) onto the fabric. Refit lid and screw tightly.
- 3 Insert probe into sensor aperture of chamber and tighten collar to provide air tight seal around the probe. Wait 30 min.
- 4 **Either:** (If chamber humidity >50%RH.) Press Up pushbutton for 3 s to start. LED will illuminate.
Or: (If chamber humidity <50%RH.) Press Down pushbutton for 3 s to start. LED will illuminate.
- 5 Press Up or Down pushbutton to adjust measured value in 0.1% steps
- 6 **Either:** Press Up pushbutton for 3 s to stop. Calibrated value is stored. LED is extinguished.
Or: Press Down pushbutton for 3 s to exit calibration without storing value. LED is extinguished.


9 Replace Radiation Shield

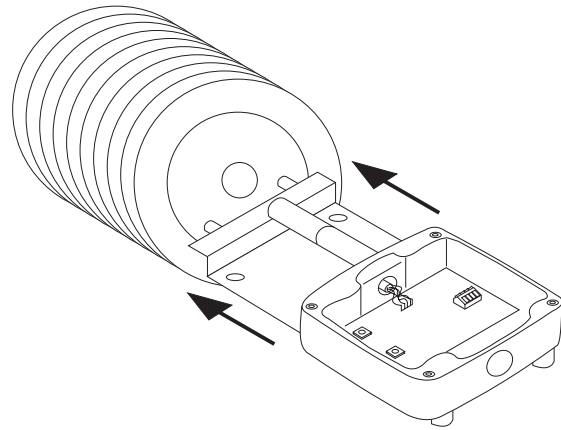


10 Re-attach Sensor

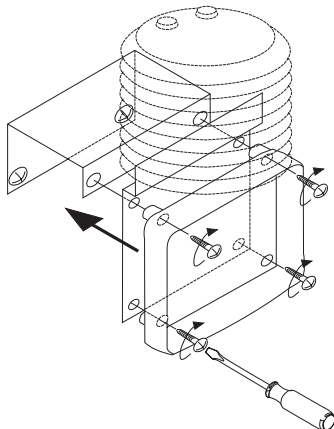

11 Replace Cover

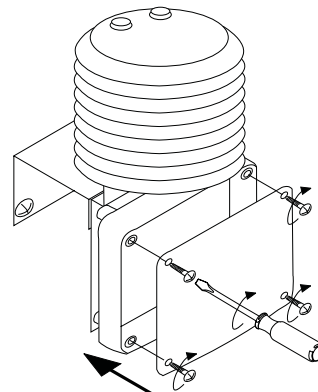

4 Maintenance (continued)

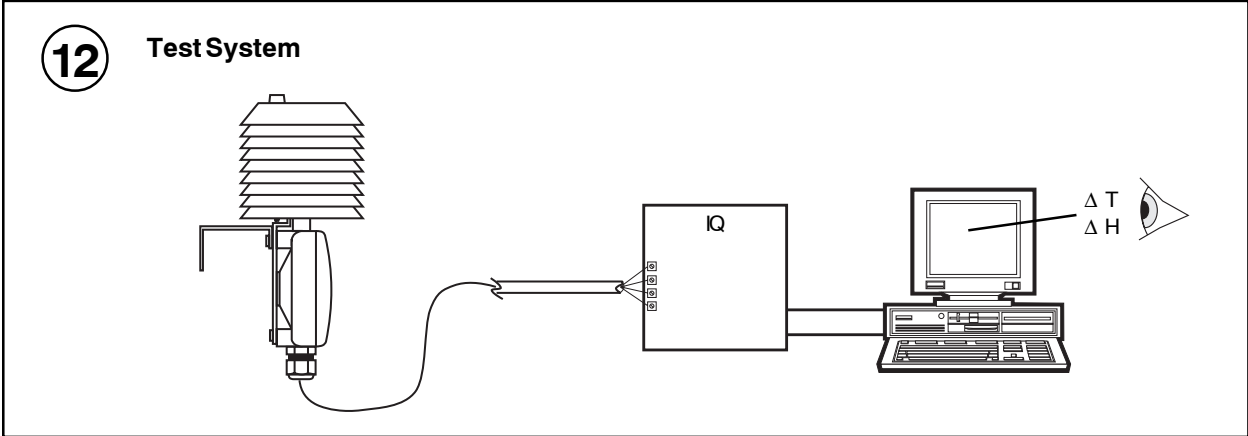

5 Disposal

**WEEE Directive :**

At the end of their useful life the packaging and product should be disposed of by a suitable recycling centre.

Do not dispose of with normal household waste.
Do not burn.

Please send any comments on this or any other Trend technical publication to techpubs@trendcontrols.com

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, Ecublens, Route du Bois 37, Switzerland by its Authorized Representative, Trend Control Systems Limited.

©Trend Control Systems Limited 2007. Trend Control Systems Limited reserves the right to revise this publication from time to time and make changes to the content hereof without obligation to notify any person of such revisions or changes.

Trend Control Systems Limited

P.O. Box 34, Horsham, West Sussex, RH12 2YF, UK. Tel: +44 (0)1403 211888 Fax: +44 (0)1403 241608 www.trend-controls.com

Trend Control Systems USA

6670 185th Avenue NE, Redmond, Washington 98052, USA. Tel: (425)897-3900, Fax: (425)869-8445 www.trend-controls.com